

Install Procedure

- Your unit is shipped with the pressure controller which controls the pump unplugged and the solenoid valve closed.
- To begin, connect the system from the main water line to the inlet and from the outlet to the house line.
- Connect the vent line to outside following the EPA or state code using the two-inch PVC pipe.
- Next, plug in the main power cord
- Open the feed water valve.
- Water Will not flow into the system yet, this is because the solenoid is closed.
- Push the open/home button on the alarm system to open the solenoid valve.
- Once it's fully open, push the reset button to silence the alarm.
- Your unit will start filling.
- To let the air out, open either the draw-off or the ball valve, depending on your model.
- Finally, plug in the pressure control to turn on the pump, bringing the system to full pressure.