

Programming 7000 SXT OCS (AIO)

For proper valve function, it must be programmed as follows:

Step 1: Enter master programming mode by setting clock to 12:01pm by using the UP/DOWN arrows then hold down both UP/DOWN arrows until display reads GAL.

Step 2: Press Extra Cycle button to enter valve type mode and select IF

Step 3: Press Extra Cycle button to enter control type mode and select TC (time clock)

Step 4: Press Extra Cycle button and select day interval of backwash and set to 3 days


Step 5: Press Extra Cycle button and select regeneration time (generally 1AM)

Step 6: Press Extra Cycle button and set backwash for 10 minutes**

Step 7: Press Extra Cycle button and set air draw for 30 minutes

Step 8: Press Extra Cycle button and set rapid rinse for 5 minutes

Step 9: Press Extra Cycle button to return to main menu. System may go into sync mode. If it does let it finish, then set time of day to current time

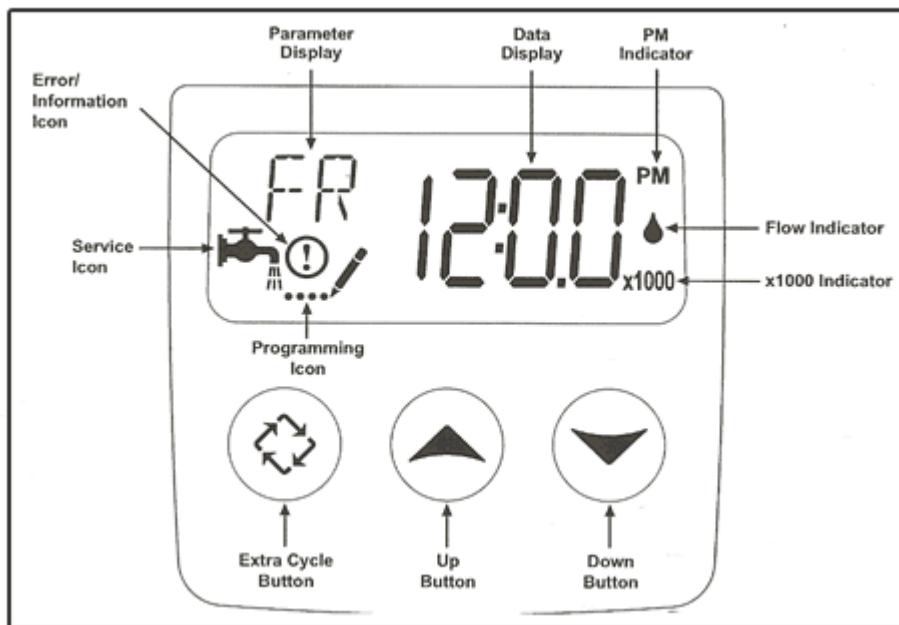

**If you are having problems with odor or iron breakthrough, set frequency for every two days and backwash for longer. (rarely needed)